

Instructions for Reverse Switch Replacement

1. Ensure fan has been switched off for at least 24 hours.
2. **CAUTION: ENSURE MAINS SUPPLY IS COMPLETELY DISCONNECTED**
3. Undo 3 screws at the bottom of the switch housing and remove base plate (on some models this might be the entire light fitting).
4. Unscrew the two retaining screws on the outside of the switch housing. Push switch through and bring into open. Make a note of what cables are connected together. All the connections to the reverse switch are made with crimp connectors. These crimps need to be removed and replaced when the wires are replaced.

CAUTION:

BEWARE OF CAPACITERS THEY MAY REMAIN CHARGED

5. Once all the wires have been changed replace switch into switch housing and replace cover or lighting fitting.

CAUTION:

ENSURE NO WIRES ARE TRAPPED WHEN REPLACING THE COVER

Should you have any further queries, please do not hesitate to contact us on :

01959 564440.

Graeme Smith
Customer Services Manager
FANTASIA DISTRIBUTION LTD