

## **RESETTING WALL CONTROL SWITCH WITH FAN OPERATION**

- 1 Ensure fan switch on wall control is in the OFF position (turn fan control knob anti clockwise till it comes to a stop).
- 2 Turn fan wall control knob to first position turning clockwise i.e. 10'clock.
- 3 Pull fan pull cord coming out of side of bottom cup under blades of fan. Keep pulling pullcord slowly till you are sure fan is in its high position.
- 4 Rotation on fan pull cord is as follows: 1<sup>st</sup> pull = high, 2<sup>nd</sup> pull = medium, 3<sup>rd</sup> pull = slow & 4<sup>th</sup> pull = off.
- 5 Once fan is in the high position the fan is set to the wall controller.
- 6 It is advisable not to touch the pull cord once set as you will need to reset once again if pull cords are pulled.
- 7 For light operation you will need to ensure light pull cord coming from bottom of light kit is in the on position for dimmer switch on wall control to operate.