

Ceiling Fan Wall Control Synchronisation

When a Fantasia Ceiling Fan (Pull Cord version) is paired with a Fantasia Wall Control the following steps should be taken.

Set up is required when fan wall control is used with pull cord style fans

1. Set fan wall controller to first setting (one turn to the right)
2. Pull fan speed cord until fan is operating in high speed.
3. Pull cord should not be touched after this set up.
4. Wall control will operate all 3 speeds and on/off

NOTE: Not to be used with DC fans or Viper fans