

Instructions for Reverse Switch Replacement

CAUTION

- Ensure mains supply to the fan/light is completely disconnected
 - Capacitors may remain charged for up to 24 hours. Short them together before touching wires
1. Undo 3 screws at the bottom of the switch housing and remove base plate (on some models this might be the entire light fitting).
 2. Unscrew the two retaining screws on the outside of the switch housing. Push switch through and bring into open. Make a note of what cables are connected together. All the connections to the reverse switch are made with crimp connectors. These crimps need to be removed and replaced when the wires are replaced.
 3. Once all the wires have been changed replace switch into switch housing and replace cover or lighting fitting.

ENSURE NO WIRES ARE TRAPPED WHEN REPLACING THE COVER

Should you have any further queries, please do not hesitate to contact us:

01959 564440 or info@fantasiaceilingfans.com

Variant 1		Variant 2		Variant 3	
From Switch	From Motor	From Switch	From Motor	From Switch	From Motor
2 x Pink	1 x Pink	2 x Pink	1 x Pink	1 x Pink	1 x Pink
2 x Yellow	1 x Orange	2 x Orange	1 x Orange	1 x Yellow	1 x Orange
1 x Grey	1 x Grey / 1 x Brown	1 x Grey	1 x Grey	2 x Blue	1 x Grey
1 x White	1 x Red	1 x Red	1 x Red	1 x Brown / 1 x White	1 x Red

Variant 4		Variant 5	
From Switch	From Motor	From Switch	From Motor
1 x Pink	1 x Pink	1 x Pink	1 x Pink
1 x Yellow	1 x Orange	1 x Yellow	1 x Orange
1 x Brown / 1 x White	1 x Grey / 1 x Brown	2 x Blue	1 x Red
2 x Blue	1 x Red	1 x Brown / 1 x White	1 x Grey / 1 x Brown